

DN6.33x - 12 channel 12 bit digitizerNETBOX up to 10 GS/s

- 4, 6, 8, 10 or 12 channels with 3.2 GS/s up to 10 GS/s
- Complete on-board calibration
- 4 input ranges: ± 200 mV up to ± 2.5 V
- 4, 6, 8, 10 or 12 GiSample standard acquisition memory
- 16, 24, 32, 40 or 48 GiSample option on-board memory
- Features: Single-Shot, Streaming, Multiple Recording, Timestamps, optional Average (Standard and Threshold defined)

Speed	SNR	ENOB
10.0 GS/s	52.3 dB	8.3 ENOB
6.4 GS/s	54.0 dB	8.7 ENOB
3.2 GS/s	54.5 dB	8.8 ENOB

FPGA Options:

- Block Average up to 1 MiS with selective averaging for TOFMS
- Digital Pulse Generator with 4 independent pulse channels



- Ethernet Remote Instrument
- LXI Core 2011 compatible
- GBit Ethernet Interface
- Sustained streaming mode up to 100 MB/s
- Direct Connection to PC/Laptop
- Connect anywhere in company LAN
- Embedded Webserver for Maintenance/Updates
- Embedded Server option for open Linux platform

Operating Systems

- Windows 7 (SP1), 8, 10, 11, Server 2008 R2 and newer
- Linux Kernel 2.6, 3.x, 4.x, 5.x
- Windows/Linux 32 and 64 bit

SBench 6 Professional Included

- Acquisition, Generation and Display of analog and digital data
- Calculation, FFT
- Documentation and Import, Export

Drivers

- LabVIEW, MATLAB, LabWindows/CVI
- C/C++, GNU C++, VB.NET, C#, J#, Delphi, Java, Python
- IVI

Model	Maximum speed		Maximum channels		Bandwidth
DN6.335-04	2 channels	10.0 GS/s	4 channels	5.0 GS/s	3.0 GHz
DN6.335-06	3 channels	10.0 GS/s	6 channels	5.0 GS/s	3.0 GHz
DN6.335-08	4 channels	10.0 GS/s	8 channels	5.0 GS/s	3.0 GHz
DN6.335-10	5 channels	10.0 GS/s	10 channels	5.0 GS/s	3.0 GHz
DN6.335-12	6 channels	10.0 GS/s	12 channels	5.0 GS/s	3.0 GHz
DN6.333-04	2 channels	6.4 GS/s	4 channels	3.2 GS/s	2.0 GHz
DN6.333-06	3 channels	6.4 GS/s	6 channels	3.2 GS/s	2.0 GHz
DN6.333-08	4 channels	6.4 GS/s	8 channels	3.2 GS/s	2.0 GHz
DN6.333-10	5 channels	6.4 GS/s	10 channels	3.2 GS/s	2.0 GHz
DN6.333-12	6 channels	6.4 GS/s	12 channels	3.2 GS/s	2.0 GHz
DN6.332-04	4 channels	3.2 GS/s	-	-	1.0 GHz
DN6.332-06	6 channels	3.2 GS/s	-	-	1.0 GHz
DN6.332-08	8 channels	3.2 GS/s	-	-	1.0 GHz
DN6.332-10	10 channels	3.2 GS/s	-	-	1.0 GHz
DN6.332-12	12 channels	3.2 GS/s	-	-	1.0 GHz

General Information

The digitizerNETBOX DN6.33x series allows recording of up to 12 channels with sampling rates of 10 GS/s. These Ethernet Remote instruments offer outstanding A/D features both in resolution and signal quality. The combination of high sampling rate and resolution makes these digitizers the top-of-the-range for applications that require high-quality signal acquisition.

The digitizerNETBOX can be installed anywhere in the company LAN and can be remotely controlled from a host PC.

Software Support

Windows Support

The digitizerNETBOX/generatorNETBOX/hybridNETBOX can be accessed from Windows 7, Windows 8, Windows 10, Windows 11 (either 32 bit or 64 bit). Programming examples for Visual C++, C++ Builder, LabWindows/CVI, Delphi, Visual Basic, VB.NET, C#, Julia, Python, Java and IVI are included.

Linux Support



The digitizerNETBOX/generatorNETBOX/hybridNETBOX can be accessed from any Linux system. The Linux support includes SMP systems, 32 bit and 64 bit systems, versatile programming examples for Gnu C++, Python, Julia as well as drivers for MATLAB for Linux. SBench 6, the powerful data acquisition and analysis software from Spectrum is also included as a Linux version.


Discovery Protocol

Physical Location	
Bus No	0
Device No	0
Function No	0
Slot No	0
IP	192.168.169.14
VISA	TCP/IP[0]:192.168.169.14::inst0::INSTR

The Discovery function helps you to find and identify any Spectrum LXI instruments, like the digitizerNETBOX and generatorNETBOX, available to your computer on the network. The Discovery function will also locate any Spectrum card products that are managed by an installed Spectrum Remote Server somewhere on the network.

After running the discovery function the card information is cached and can be directly accessed by SBench 6. Furthermore the qualified VISA address is returned and can be used by any software to access the remote instrument.

SBench 6 Professional

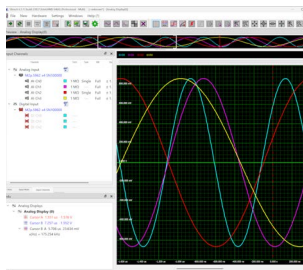

The digitizerNETBOX, generatorNETBOX and hybridNETBOX can be used with Spectrum's powerful software SBench 6 – a Professional license for the software is already installed in the box. SBench 6 supports all of the standard features of the instrument. It has a variety of display windows as well as analysis, export and documentation functions.

tions.

- Available for Windows 7 and newer and Linux Kernel 2.6 and newer
- Easy to use interface with drag and drop, docking windows and context menus
- Display of analog and digital data, X-Y display, frequency domain and spread signals
- Designed to handle several GBytes of data
- Fast data preview functions

IVI Driver

The IVI standards define an open driver architecture, a set of instrument classes, and shared software components. Together these provide critical elements needed for instrument interchangeability. IVI's defined Application Programming Interfaces (APIs) standardize common measurement functions reducing the time needed to learn a new IVI instrument.

The Spectrum products to be accessed with the IVI driver can be locally installed data acquisition cards, remotely installed data acquisition cards or remote LXI instruments like digitizerNETBOX/generatorNETBOX. To maximize the compatibil-

ity with existing IVI based software installations, the Spectrum IVI driver supports IVI Scope, IVI Digitizer and IVI FGen class with IVI-C and IVI-COM interfaces.

Third-party Software Products

Most popular third-party software products, such as LabVIEW, MATLAB or LabWindows/CVI are supported. All drivers come with examples and detailed documentation.

Embedded Webserver

SPECTRUM INSTRUMENTATION	
Welcome	
Instrument Model	DN2-465-08
Manufacturer	Spectrum GmbH
Serial Number	1234
Description	digitizerNETBOX
LXI Features	LXI Core 2011
LXI Version	LXI Device Specification 2011 rev. 1.4
Host Name	192.168.169.23
mDNS Host Name	digitizerNETBOX.local
MAC Address	0C:C4:7A:B3:C2:A2
TCP/IP Address	192.168.169.23
Firmware Revision	62
Software Revision	5.17.17117
Instrument Address String [VISA]	TCP/IP::192.168.169.23::INSTR
LAN ID Indicator	Enable

The integrated webserver follows the LXI standard and gathers information on the product, set up of the Ethernet configuration and current status. It also allows the setting of a configuration password, access to documentation and updating of the complete instrument firmware, including the embedded remote server and the webserver.

Hardware features and options

LXI Instrument



The digitizerNETBOX and generatorNETBOX are fully LXI instrument compatible to LXI Core 2011 following the LXI Device Specification

2011 rev. 1.4. The digitizerNETBOX/generatorNETBOX has been tested and approved by the LXI Consortium.

Located on the front panel is the main on/off switch, LEDs showing the LXI and Acquisition status and the LAN reset switch.

Front Panel



Standard SMA connectors are used for all analog input signals and all trigger and clock signals. No special adapter cables are needed and the connection is secure even when used in a moving environment.

Custom front panels are available on request even for small series, be it BNC, LEMO connectors or custom specific connectors.

Ethernet Connectivity




The GBit Ethernet connection can be used with standard COTS Ethernet cabling. The integration into a standard LAN allows to connect the digitizerNETBOX/generatorNETBOX either directly to a desktop PC or Laptop or it is possible to place the instrument somewhere in the

company LAN and access it from any desktop over the LAN.

Boot on Power Option

The digitizerNETBOX/generatorNETBOX can be factory configured to automatically start and boot upon availability of the input power rail. That way the instrument will automatically become available again upon loss of input power.

Input Amplifier

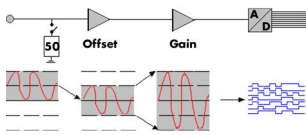

The analog inputs can be adapted to real world signals using a wide variety of settings that are individual for each channel. By using software commands one can select a matching input range and the signal offset can be compensated by programmable AC coupling or offset shifting.


Software selectable input path

For each of the analog channels the user has the choice between two analog input paths. The „Buffered“ path offers the highest flexibility when it comes to input ranges and termination. A software programmable 50 Ohm and 1 MOhm termination also allows to connect standard oscilloscope probes to the card. The „50 Ohm“ path on the other hand provides the highest bandwidth and the best signal integrity with a fewer number of input ranges and a fixed 50 Ohm termination.

Software selectable lowpass filter

Each analog channel contains a software selectable low-pass filter to limit the input bandwidth. Reducing the analog input bandwidth results in a lower total noise and can be useful especially with low voltage input signals.

M5i.3321/DNx.332-xx Time Domain Response Optimization

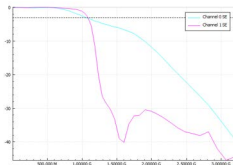

This option is only available for the M5i.3321-x16 and DNX.332-xx (3.2 GS/s 12 Bit Digitizer with 1 GHz bandwidth). This option changes the hardware input filter of the card. The -inptd option optimizes the input stage for time domain measurement with a modified filter characteristic to minimize overshoot


and undershoot on step response. The standard filter is optimized for frequency domain measurements with a very steep cut-off frequency. This steep cut-off frequency results in some overshoot/undershoot and ringing when feeding the system with step signals.

Calibration on-board/factory/ISO/IEC 17025

All of the channels are calibrated in factory before the board is shipped. To compensate for different variations like PC power supply, temperature and aging, the software driver provides routines for an automatic on-board offset and gain calibration of all input ranges. All the cards contain a high precision on-board calibration reference.

Depending on the QM needs the card can be shipped to factory for a complete re-calibration against external traceable calibration sources. As an option a ISO/IEC 17025-compliant certificate is available with new cards and after recalibration.

Ring buffer mode



The ring buffer mode is the standard mode of all oscilloscope instruments. Digitized data is continuously written into a ring memory until a

trigger event is detected. After the trigger, post-trigger samples are recorded and pre-trigger samples can also be stored. The number of pre-trigger samples available simply equals the total ring memory size minus the number of post trigger samples.

FIFO mode

The FIFO mode is designed for continuous data transfer between remote instrument and PC memory or hard disk. The control of the data stream is done automatically by the driver on interrupt request.

The complete installed on-board memory is used for buffer data, making the continuous streaming extremely reliable.

8 bit Sample reduction (low-resolution) mode

The digitizer of the 33xx series allow to optionally reduce the resolution of the A/D samples from their native 12 bit resolution down to 8 bit resolution, such that each sample will only occupy one byte in memory instead of the standard two bytes required. This does not only enhance the size of the on-board memory from 2 GiSamples (8 GiSamples optionally) to effectively 4 GiSamples (16 GiSamples optionally), but also reduces the required bandwidth over the PCIe bus and also to the storage devices, such as SSD or HDD. Using the 8 bit mode it is possible to stream data over the PCIe bus with 10 GS/s continuously!

12 bit packed data storage mode

As default the digitizers of the 33xx series store their native 12 bit A/D samples as signed, 16 bit words in two's complement format, for using the samples "as is" in any numerical calculation in post-processing. Optionally the card can instead store the 12 bit A/D samples in a packed fashion, without filling up the upper four bits with sign extension. Whilst this likely necessitates un-packing the samples again before processing, this reduces the amount of bytes needed for sample storage without reducing the native 12 bit A/D converter resolution. Since two samples now occupy only 3 bytes instead of 4 bytes, this not only enhances the size of the on-board memory from 2 GiSamples (8 GiSamples optionally) to effectively 2.66 GiSamples (10.66 GiSamples optionally), but also reduces the required bandwidth over the PCIe bus and to the storage devices, such as SSD or HDD.


Channel trigger

The data acquisition instruments offer a wide variety of trigger modes. Besides the standard signal checking for level and edge as known from oscilloscopes it's also possible to define a window trigger. All trigger modes can be combined with the pulsewidth trigger. This makes it possible to trigger on signal errors like too long or too short pulses. In addition to this a re-arming mode (for accurate trigger recognition on noisy signals) the AND/OR conjunction of different trigger events is possible. As a unique feature it is possible to use deactivated channels as trigger sources.

External trigger input


All boards can be triggered using up to two external analog or digital signals. One external trigger input has two analog comparators that can define an edge or window trigger, a hysteresis trigger or a rearm trigger. The other input has one comparator that can be used for standard edge and level triggers.

Multiple Recording

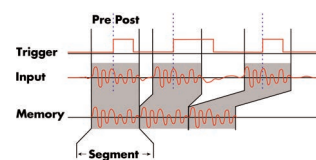

The Multiple Recording mode allows the recording of several trigger events with an extremely short re-arming time. The hardware doesn't need to be restarted in between. The on-board memory is divided in several segments of the same size. Each of them is filled with data if a trigger event occurs. Pre- and posttrigger of the segments can be programmed. The number of acquired segments is only limited by the used memory and is unlimited when using FIFO mode.


Firmware Option Block Average

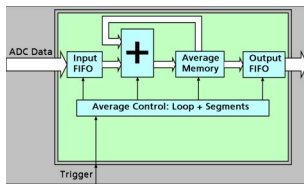

The Block Average Module improves the fidelity of noisy repetitive signals. Multiple repetitive acquisitions with very small dead-time are accumulated and averaged. Random noise is reduced by the averaging process improving the visibility of the repetitive signal. The complete averaging process is done inside the FPGA of the digitizer generating no CPU load at all. The amount of data is greatly decreased as well as the needed transfer bandwidth is heavily reduced.

Please see separate data sheet for details on the firmware option.

Timestamp

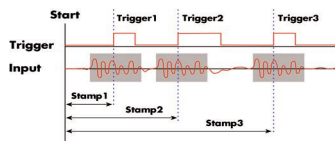


The timestamp function writes the time positions of the trigger events in an extra memory. The timestamps are relative to the start of recording, a defined zero time, externally synchronized to a radio clock, an IRIG-B or a GPS receiver. Using the external synchronization gives a precise time relation for acquisitions of systems on different locations.

ternally synchronized to a radio clock, an IRIG-B or a GPS receiver. Using the external synchronization gives a precise time relation for acquisitions of systems on different locations.

External clock input and output


Using a dedicated connector a sampling clock can be fed in from an external system. Additionally it's also possible to output the internally used sampling clock on a separate connector to synchronize external equipment to this clock.

Reference clock



The option to use a precise external reference clock (normally 10 MHz) is necessary to synchronize the instrument for high-quality measurements with external equipment (like a signal source). It's also possible to enhance the quality of the sampling clock in this way. The driver automatically generates the requested sampling clock from the fed in reference clock.

Firmware Option Digital Pulse Generator

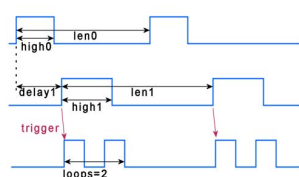


The digital pulse generator option adds 4 internal independent digital pulse generators with programmable duty cycle, output frequency, delay and number of loops.

These digital pulse generators can be triggered by software, hardware trigger or can trigger each other allowing to form complex pulse schemes to drive external equipment or experiments. The digital pulse generators can be output on the existing multi-XIO lines (X0, X1, ...) or can be used to trigger other pulse generators internally. Time resolution of the pulse generator depends on the cards type and the selected sampling rate and can be found in the technical data section.

The pulse generator option is a firmware option and can be later installed on all shipped cards.

Option Embedded Server

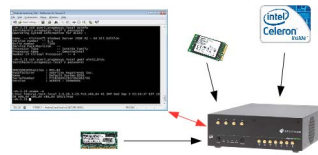

The option turns the digitizer-NETBOX/generatorNETBOX in a powerful PC that allows to run own programs on a small and remote data acquisition system. The digitizerNETBOX/generatorNETBOX is enhanced by more memory, a powerful CPU, a freely accessible internal SSD and a remote software development access method.

The digitizerNETBOX/generatorNETBOX can either run connected to LAN or it can run totally independent, storing data to the internal SSD. The original digitizerNETBOX/generatorNETBOX remote instrument functionality is still 100 % available. Running the embedded server option it is possible to pre-calculate results based on the acquired data, store acquisitions locally and to transfer just the required data or results parts in a client-server based software structure. A different example for the digitizerNETBOX/generatorNETBOX embedded server is surveillance/logger application which can run totally independent for days and send notification emails only over LAN or offloads stored data as soon as it's connected again.

Access to the embedded server is done through a standard text based Linux shell based on the ssh secure shell.

External Amplifiers



For the acquisition of extremely small voltage levels with a high bandwidth a series of external amplifiers is available. Each of the one channel amplifiers is working with a fixed input impedance and allows - depending on the bandwidth - to select different amplification levels between x10 (20 dB) up to x1000 (60 dB). Using the external amplifiers of the SPA series voltage levels in the uV and mV area can be acquired.

ing the external amplifiers of the SPA series voltage levels in the uV and mV area can be acquired.

DN2 / DN6 Technical Data

Definitions

Specifications (spec)

Figures are valid for products stored for at least 2 hours inside the specified operating temperature range, after a 30 minute warm-up, after running an on-board calibration and with properly cooled products. Data published in this document are specifications (spec) only where specifically indicated. Figures marked with (spec) are calibrated to the specification during production and during factory calibrations.

Typical (typ)

Figures marked with (typ) are a characteristic performance that most of the manufactured instruments will meet due to design. Typical figures are measured during production but cannot be calibrated.

Measured (meas)

A figure measured during development to communicate expected performance. The figure is measured in lab environment with an environmental temperature between 20°C and 25°C and an altitude of less than 100 m.

Nominal (nom)

The value of this figure is determined by design and is not measured nor calibrated.

Analog Inputs

Resolution (nom)		12 bit (can be switched by software to 8 bit to reduce data throughput)
Input Range (nom)	software programmable	±200 mV, ±500 mV, ±1 V, ±2.5 V
Input Type	fixed	Single-ended
Input Offset (nom)	software programmable	programmable to ±100% of input range in steps of 1 %
ADC Differential non linearity (nom)	DNL, ADC only	±0.3 LSB
ADC Integral non linearity (nom)	INL, ADC only	±2.5 LSB
Offset error (full speed), DC signal (spec)	after warm-up and calibration	< 0.5% of range
Gain error (full speed), DC signal (spec)	after warm-up and calibration	< 0.5% of reading
Crosstalk: Signal 10 MHz, 50 Ω (meas)	any range, any channel	< -110 dB
Crosstalk: Signal 100 MHz, 50 Ω (meas)	any range, any channel	< -103 dB
Analog Input impedance (nom)	fixed	50 Ω
Analog input coupling (nom)	fixed	DC
Over voltage protection (nom)	input range ±200 mV	1.4 Vrms (16 dBm), max ±2.0 V peak input voltage
Over voltage protection (nom)	input range ≥ ±500 mV	5 Vrms (27 dBm), max ±7.5 V peak input voltage
Anti-Aliasing Filter (standard)		fixed at specified bandwidth (see table below)
Channel selection (single-ended inputs)	software programmable	1 or 2 channels (maximum is model dependent)
Calibration	Internal	Self-calibration is done on software command and corrects against the on-board references. Self-calibration should be issued after warm-up time.
Calibration	External	External calibration calibrates the on-board references used in self-calibration. All calibration constants are stored in non-volatile memory. Optional ISO/IEC17025-compliant certificate. A yearly external calibration is recommended.

	Input Range	M5i.336x-x16 DNx.336-xx	M5i.335x-x16 DNx.335-xx	M5i.333x-x16 DNx.333-xx	M5i.3321-x16 DNx.332-xx
lower bandwidth limit	all ranges	0 Hz (DC)	0 Hz (DC)	0 Hz (DC)	0 Hz (DC)
-3 dB bandwidth (typ)	all ranges	≥4.7 GHz	≥3.0 GHz	≥2.0 GHz	≥1.0 GHz
-3 dB bandwidth (average)	all ranges	4.8 GHz	3.1 GHz	2.2 GHz	1.1 GHz
Flatness within ±0.5 dB (meas)	all ranges	2.0 GHz	1.8 GHz	1.1 GHz	0.8 GHz

Trigger

Available trigger modes	software programmable	Channel Trigger, External, Software, Window, Re-Arm, Or/And, Delay
Channel trigger level resolution		12 bit
Trigger edge	software programmable	Rising edge, falling edge or both edges
Trigger delay	software programmable	0 up to (256 GiS - 32) in steps of 32
Trigger holdoff (for Multi)	software programmable	0 up to (256 GiS - 32) in steps of 32
Multi re-arming time (meas)	1 channel mode 2 channel mode	352 samples (+ programmed pretrigger) 176 samples (+ programmed pretrigger)
Pretrigger at Multi, FIFO	software programmable	32 up to (32 KiSamples / channels) in steps of 32
Posttrigger at Standard Single	software programmable	32 up to (256 GiS - 32) in steps of 32
Memory depth	software programmable	64 up to (Installed memory / channels) in steps of 32
Multiple Recording segment size	software programmable	64 up to (Installed memory / channels) in steps of 32
Internal/External trigger accuracy		1 sample
Timestamp modes	software programmable	Standard, Startreset, external reference clock (e.g. PPS from GPS, IRIG-B)
Data format		Std., Startreset: 64 bit counter, increments with sample clock (reset manually or on start) RefClock: 24 bit upper counter (increment with RefClock) 40 bit lower counter (increments with sample clock, reset with RefClock)
Extra data	software programmable	none, acquisition of X0/X1/X2/X3 inputs at trigger time, trigger source (for OR trigger)
Size per stamp		128 bit = 16 bytes
External trigger		Ext X0, X1, X2, X3
External trigger type		single level comparator3.3V LVTTTL logic inputs
External trigger impedance (typ)	software programmable	50 Ω or 3 kΩFor electrical specifications refer to „Multi Purpose I/O lines“ section.
External trigger input level (nom)		±5 V
External trigger over voltage protection (nom)	50 Ω termination 3 kΩ termination	±20 V 7 Vrms
External trigger sensitivity, min signal swing (nom)		200 mVpp
External trigger level (nom)	software programmable	±5 V with a stepsize of 10 mV

Trigger edge	software programmable	Rising edge, falling edge or both edges	
External trigger bandwidth (typ)	50 Ω 3 kΩ 10 kΩ	DC to 2 GHz DC to 750 MHz n.a.	DC to 125 MHz n.a. DC to 125 MHz
Minimum external trigger pulse width		≥ 2 samples	≥ 2 samples
Minimum pause between external triggers		≥ 2 samples	≥ 2 samples
Resulting max. detectable trigger frequency		[Current Samplerate]/4	[Current Samplerate]/4

Multi Purpose I/O lines (front-plate)

Number of multi purpose lines		four, named X0, X1, X2, X3	
Input: available signal types	software programmable	Logic Trigger, Asynchronous Digital-In, Synchronous Digital-In (Digitizer only), Timestamp Reference Clock (Digitizer only)	
Input: impedance (nom)	software programmable	10 kΩ to 3.3 V or 50 Ω to GND	
Input: maximum voltage level (nom)		-0.5 V to +4.0 V	
Input: signal levels (nom)		3.3 V LVTTTL (Low ≤ 0.8 V, High ≥ 2.0 V)	
Input: bandwidth (typ)		125 MHz	
Output: available signal types	software programmable	Asynchronous Digital-Out, Trigger Output, Run, Arm, System Clock, Synchronous Digital-Out (AWG only)	
Output: impedance (nom)		50 Ω	
Output: signal levels (nom)		3.3 V LVTTTL	
Output: type (nom)		3.3 V LVTTTL, TTL compatible for high impedance loads	
Output: drive strength (nom)		Capable of driving 50 Ω loads, maximum drive strength ±48 mA	
Output: internal update rate	M5i.332x, M5i.333x, DNx.332-xx, DNx.333-xx	Current sampling clock ≤ 3.2 GS/s: 1/4 of sampling clock Current sampling clock > 3.2 GS/s: 1/8 of sampling clock	
Output: internal update rate	M5i.335x, M5i.336x, DNx.335-xx	Current sampling clock ≤ 5.0 GS/s: 1/4 of sampling clock Current sampling clock > 5.0 GS/s: 1/8 of sampling clock	
Output: internal update rate	M5i.63xx, DNx.63xx DNx.63x-xx	Current sampling clock ≤ 5.0 GS/s: 1/4 of sampling clock Current sampling clock > 5.0 GS/s: 1/8 of sampling clock	
Output: min high/low time (nom)		4 ns	
Output: max signal frequency (typ)		125 MHz	

Option M5i.xxxx-PulseGen

Number of internal pulse generators	4	
Number of pulse generator output lines	4 (Existing multi-purpose outputs X0 to X3)	
Time resolution of pulse generator	Pulse generator's sampling rate is derived from instrument's sampling rate and value can be read out. Pulse generator update rate are: 33xx: Base Sampling Rate x Channels / 32 (max 10 GS/s x 1 ch / 32) = 312.5 MS/s (3.2 ns) 63xx: Sampling Rate x Channels / 32 (max 10 GS/s x 1 ch / 32) = 312.5 MS/s (3.2 ns)	
Programmable output modes	Single-shot, multiple repetitions on trigger, gated	
Programmable trigger sources	Software, Card Trigger, Other Pulse Generator, XIO lines.	
Programmable trigger gate	None, ARM state, RUN state	
Programmable length (frequency)	2 to 4Gi samples in steps of 1 (32 bit)	
Programmable width (duty cycle)	1 to 4Gi samples in steps of 1 (32 bit)	
Programmable delay	0 to 4Gi samples in steps of 1 (32 bit)	
Programmable loops	0 to 4Gi samples in steps of 1 (32 bit) with 0 = infinite loops	
Output level of digital pulse generators	Please see section of multi-purpose I/O lines.	

Clock

Clock Modes	software programmable	internal PLL, external reference clock, star-hub synchronization clock	
Internal clock accuracy (spec)		≤ ±1 ppm	
Clock setup range		base frequency or divided base frequency	
Clock setup base frequencies	M5i.3321, DNx.332-xx M5i.333x, DNx.333-xx M5i.335x, DNx.334-xx M5i.336x, DNx.336-xx	3.2 GS/s, 2.5 GS/s, 2.0 GS/s 6.4 GS/s, 5.0 GS/s, 4.0 GS/s 10.0 GS/s, 8.0 GS/s, 6.4 GS/s 10.0 GS/s, 8.0 GS/s, 6.4 GS/s	
Clock setup divider	M5i.3321, DNx.332-xx All other models	power of 2: 2, 4, 8, 16, 32, ... , 524288, 1048576 power of 2: 2, 4, 8, 16, 32, ... , 524288, 1048576, 2097152	
Clock setup examples	M5i.3321, DNx.332-xx M5i.333x, DNx.333-xx M5i.335x, DNx.334-xx M5i.336x, DNx.336-xx	Combination of any base frequency with any divider up to [max sample rate]/[max divider]: 3.2, 2.5, 2.0, 1.6, 1.25, 1.0, 0.8 GS/s, ... 3.2 kS/s 6.4, 5.0, 4.0, 3.2, 2.5, 2.0, 1.6, 1.25, 1.0, 0.8 GS/s, ..., 3.2 kS/s 10.0, 8.0, 6.4, 5.0, 4.0, 3.2, 2.5, 2.0, 1.6, 1.25, 1.0 GS/s, ..., 5 kS/s 10.0, 8.0, 6.4, 5.0, 4.0, 3.2, 2.5, 2.0, 1.6, 1.25, 1.0 GS/s, ..., 5 kS/s	
External reference clock range (nom)	software programmable	≥ 2 MHz and ≤ 750 MHz in steps of 2 MHz	
External reference clock input impedance (nom)		50 Ω fixed	
External reference clock input coupling (nom)		AC coupling	
External reference clock input edge		Rising edge	
External reference clock input type		Single-ended, sine wave or square wave	
External reference clock input swing (nom)	min max	200 mVpp 3 Vpp	
External reference clock input max DC voltage (nom)		±10 V (with max 3.0 V difference between low and high level)	
External reference clock input duty cycle (nom)		45% to 55%	
Clock setup granularity when using reference clock		divider: maximum sampling rate divided by: TBD	
Internal reference clock output type		Single-ended, AC-coupled, LVPECL, 720 mVpp (typ)	
Internal reference clock output frequency	M5i.3321, DNx.332-xx All other models	clock setup base frequency / 64 (example: clock 3.2 GS/s -> output 50.000 MHz) clock setup base frequency / 128 (example: clock 4.0 GS/s -> output 31.25 MHz)	
Star-Hub synchronization clock modes	software programmable	Internal clock, External reference clock	
Channel to channel skew on one card (meas)		<12 ps	
Skew between star-hub synchronized cards (meas)	software programmable	skew adjustable up to 200 ps (10 GS/s models) or 312 ps (6.4 GS/s and 3.2 GS/s models)	

Block Average Signal Processing Option M5i.33xx/DNx.33x

Averaging/Accumulation Modes	Software programmable	Standard or threshold defined averaging (TDA) for positive or negative pulses
Minimum Waveform Length		64 samples
Minimum Waveform Stepsize		32 samples
Maximum Waveform Length	1 channel active	1 MiSamples
Maximum Waveform Length	2 channels active	512 KiSamples
Minimum Number of Averages		2
Maximum Number of Averages		1024
Data Output Format	fixed	32 bit signed integer
Re-Arming Time between waveforms (meas)	1 channel mode	352 samples (+ programmed pretrigger)
	2 channel mode	176 samples (+ programmed pretrigger)
Re-Arming Time between end of average to start of next average (nom)		Two times the programmed segment length's (L) acquisition time: $t = 2 * \text{SegmentLen} * \text{ActiveChannels} / \text{Samplerate}$

Connectors

Analog Inputs (one for each single-ended input)	33x		SMA female	Cable-Type: Cab-3mA-xx-xx
Analog Outputs (two for each differential output)		63x	SMA female	Cable-Type: Cab-3mA-xx-xx
Clock Input	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx
Clock Output	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx
Trg0 Input	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx
X0	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx
X1	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx
X2	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx
X3	33x	63x	SMA female	Cable-Type: Cab-3mA-xx-xx

Connection Cycles

All connectors have an expected lifetime as specified below. Please avoid to exceed the specified connection cycles or use connector savers

SMA connector	500 connection cycles
Power connector	500 connection cycles
LAN connector	500 connection cycles

Option digitizerNETBOX/generatorNETBOX embedded server (DN2.xxx-Emb, DN6.xxx-Emb)

CPU	Intel Quad Core 2 GHz	
System memory	4 GiByte RAM	
System data storage	Internal 128 GByte SSD	
Development access	Remote Linux command shell (ssh), no graphical interface (GUI) available	
Accessible Hardware	Full access to Spectrum instruments, LAN, front panel LEDs, RAM, SSD	
Integrated operating system	OpenSuse 12.2 with kernel 4.4.7.	
Internal PCIe connection (PCIe bus connection is shared amongst all internal digitizer/generator modules)	DN2.20, DN2.46, DN2.47, DN2.49, DN2.60, DN6.46, DN6.49: DN2.59, DN2.65, DN2.80, DN2.81, DN6.59, DN6.65: DN2.22, DN2.33, DN2.44, DN2.63, DN2.66, DN2.96, DN2.82: DN6.22, DN6.33, DN6.44, DN6.63, DN6.66, DN6.96:	PCIe x1, Gen1 PCIe x1, Gen1 PCIe x1, Gen2 PCIe x1, Gen2

Ethernet specific details

LAN Connection	Standard RJ45	
LAN Speed	Auto Sensing: GBit Ethernet, 100BASE-T, 10BASE-T	
LAN IP address	DHCP (IPv4) with AutoIP fall-back (169.254.x.y), fixed IP (IPv4)	
Sustained Streaming speed (typ)	DN2.20, DN2.46, DN2.47, DN2.49, DN2.60 up to 70 MByte/s DN6.46, DN6.49 DN2.59, DN2.65, DN2.22, DN2.33, DN2.44, up to 100 MByte/s DN2.63, DN2.66, DN6.59, DN6.65, DN6.22, DN6.33, DN6.44, DN6.63, DN6.66	
Used TCP/UDP Ports	Webserver: 80 VISA Discovery Protocol: 111, 9757 Spectrum Remote Server: 1026, 5025	mDNS Daemon: 5353 UPNP Daemon: 1900

AC Power connection details (default configuration)

Mains AC power supply	Input voltage: 100 to 240 VAC, 50 to 60 Hz
AC power supply connector	IEC 60320-1-C14 (PC standard coupler)
Power supply cord	power cord included for Schuko contact (CEE 7/7)

DC 24 V Power supply details (DN2 only, option DN2.xxxx-DC24)

Input Voltage	18 V to 36 V
Power supply connector	screw terminal
Power supply cord	no cord included

Serial connection details

Serial connection (RS232)	DN2 with hardware $\geq$ V11 DN6 with hardware $\geq$ V10	For diagnostic purposes only. Do not use, unless being instructed by a Spectrum support agent.
---------------------------	--	--


Certification, Compliance, Warranty

Conformity Declaration	EN 17050-1:2010	General Requirements
EU Directives	2014/30/EU	EMC - Electromagnetic Compatibility
	2014/35/EU	LVD - Electrical equipment designed for use within certain voltage limits
	2011/65/EU	RoHS - Restriction of the use of certain hazardous substances in electrical and electronic equipment
	2006/1907/EC	REACH - Registration, Evaluation, Authorisation and Restriction of Chemicals
	2012/19/EU	WEEE - Waste from Electrical and Electronic Equipment
	2006/66/EC	On batteries and accumulators and waste batteries and accumulators
Compliance Standards	EN 61010-1: 2010	Safety regulations for electrical measuring, control, regulating and laboratory devices - Part 1: General requirement
	EN 61187:1994	Electrical and electronic measuring equipment - Documentation
	EN 61326-1:2021	Electrical equipment for measurement, control and laboratory use
	EN 61326-2-1:2021	EMC requirements - Part 1: General requirements
		EMC requirements - Part 2-1: Particular requirements - Test configurations, operational conditions and performance criteria for sensitive test and measurement equipment for EMC unprotected applications
	EN IEC 63000:2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances
Product warranty	5 years starting with the day of delivery	
Software and firmware updates	Life-time, free of charge	

Frequency Response Plots


Frequency Response M5i.3360-x16, M5i.3367-x16, DNx.336-xx (meas)

Sampling Rate: 10 GS/s, Bandwidth 4.7 GHz
50 Ω , DC coupling, no offset, no external filter

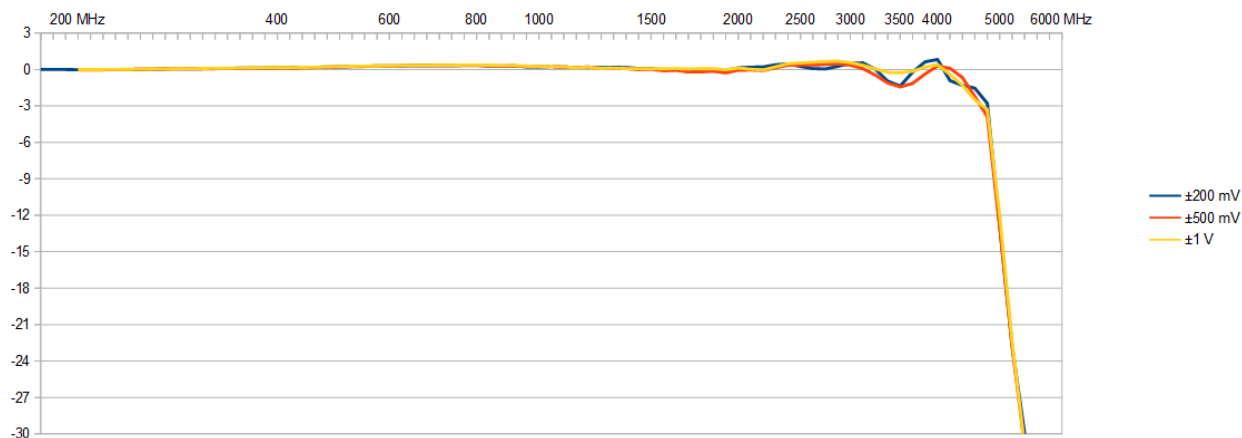


Frequency Response M5i.3350-x16, M5i.3357-x16, DNx.335-xx (meas)

Sampling Rate: 10 GS/s, Bandwidth 3.0 GHz
50 Ω , DC coupling, no offset, no external filter

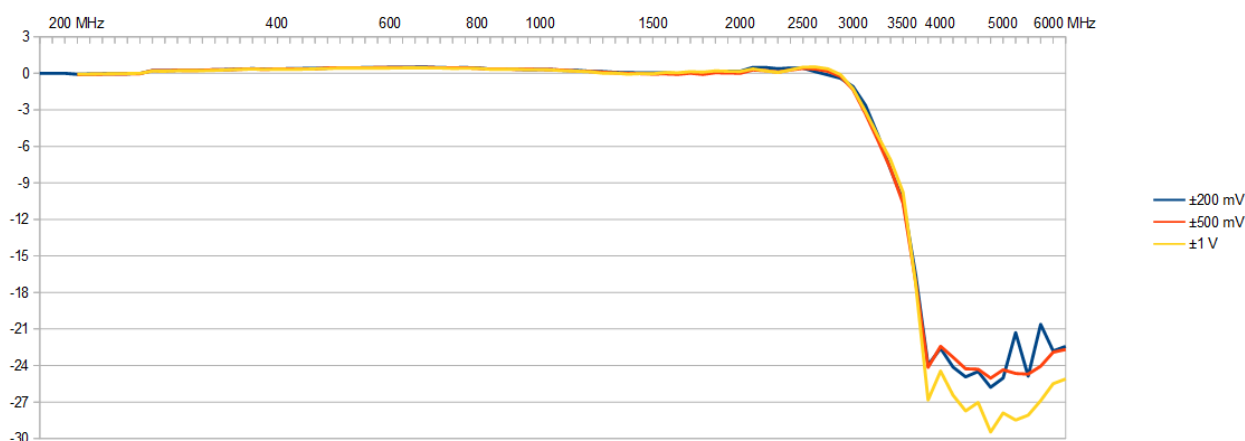


Frequency Response M5i.3330-x16, M5i.3337-x16, DNx.333-xx (meas)

Sampling Rate: 6.4 GS/s, Bandwidth 2.0 GHz
50 Ω , DC coupling, no offset, no external filter

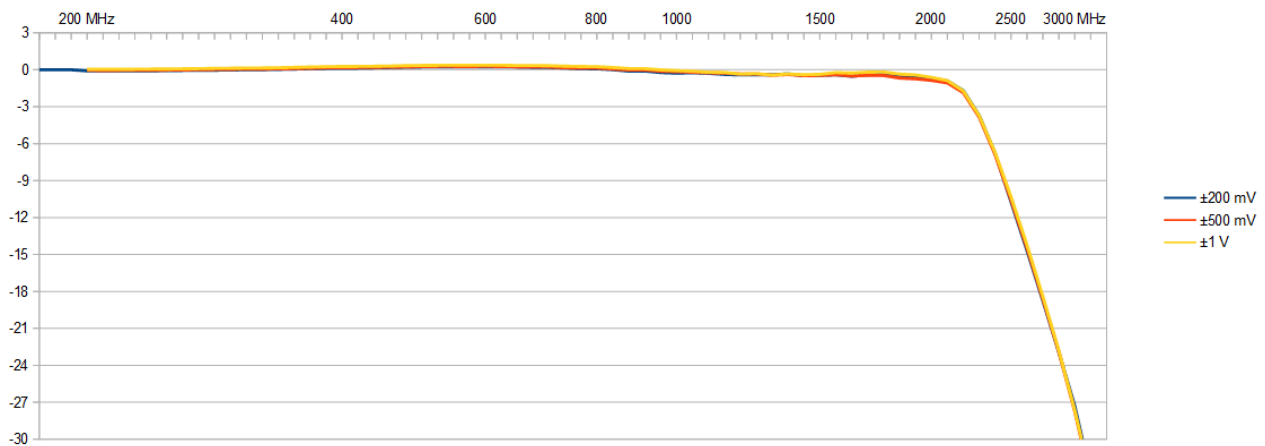


Frequency Response M5i.3321-x16, DNx.332-xx Standard (meas)

Sampling Rate: 3.2 GS/s, Bandwidth 1.0 GHz
50 Ω , DC coupling, no offset, no external filter
Standard Filter

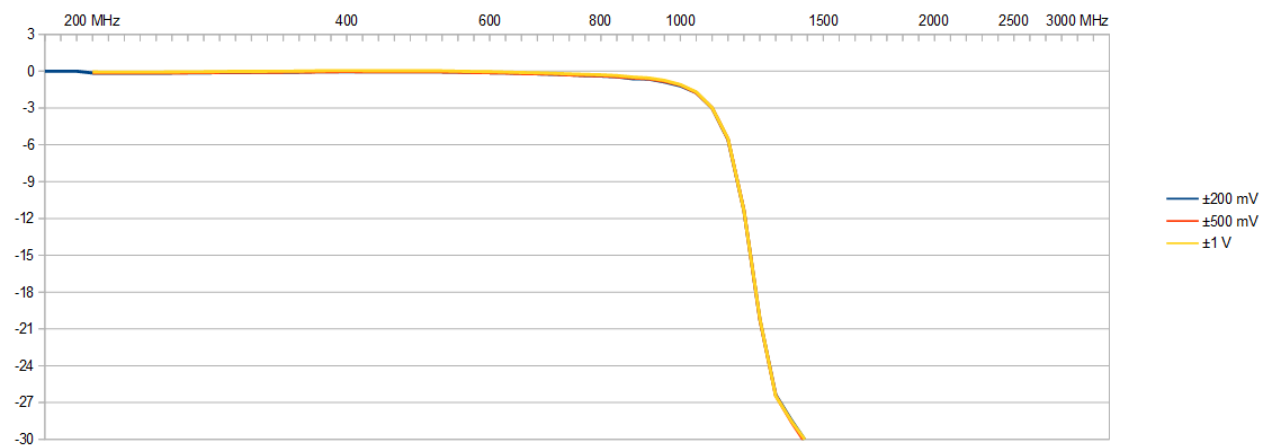

Frequency Response M5i.3321-x16, DNx.332-xx with option -inptd (meas)

Sampling Rate: 3.2 GS/s, Bandwidth 1.0 GHz
50 Ω , DC coupling, no offset, no external filter
Option -inptd (input time domain optimization) Filter

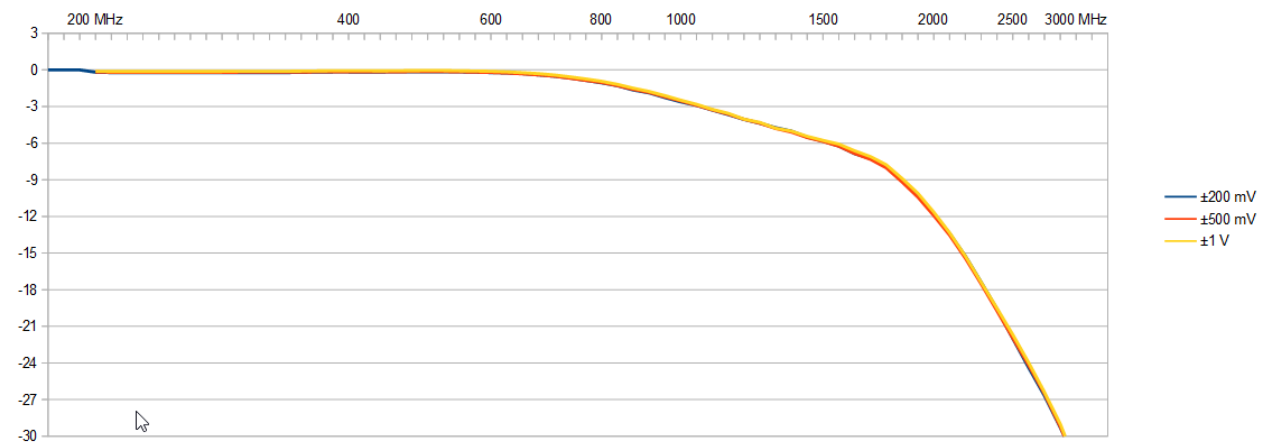

Dynamic Parameters 10.0 GS/s 4.7 GHz models

M5i.3360-x16/M5i.3367-x16/DNx.336-xx - 12 Bit 10 GS/s (channel 0)													
Input Range	±200 mV						±500 mV						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	50.9 dB	50.3 dB	50.6 dB	50.0 dB	50.4 dB	50.9 dB	51.8 dB	51.5 dB	51.2 dB	50.9 dB	51.4 dB	50.8 dB	
THD (typ)	-65.9 dB	-67.4 dB	-69.6 dB	-60.0 dB	-53.7 dB	-57.4 dB	-70.6 dB	-69.1 dB	-65.5 dB	-61.4 dB	-58.8 dB	-57.8 dB	
SFDR incl. harm. (typ)	59.7 dB	57.6 dB	59.6 dB	58.1 dB	55.1 dB	57.9 dB	61.2 dB	59.3 dB	58.8 dB	58.2 dB	60.5 dB	58.4 dB	
SFDR excl. harm. (typ)	59.7 dB	57.6 dB	59.6 dB	58.1 dB	60.7 dB	61.4 dB	61.2 dB	59.3 dB	58.8 dB	58.2 dB	63.9 dB	60.1 dB	
SINAD/THD+N (typ)	50.8 dB	50.3 dB	50.6 dB	49.6 dB	48.7 dB	50.0 dB	51.7 dB	51.4 dB	51.1 dB	50.6 dB	50.7 dB	50.0 dB	
ENOB/SINAD (typ)	8.2 LSB	8.1 LSB	8.1 LSB	8.0 LSB	7.8 LSB	8.0 LSB	8.3 LSB	8.2 LSB	8.2 LSB	8.1 LSB	8.1 LSB	8.0 LSB	
ENOB/SNR (typ)	8.2 LSB	8.1 LSB	8.1 LSB	8.0 LSB	8.1 LSB	8.2 LSB	8.3 LSB	8.3 LSB	8.2 LSB	8.1 LSB	8.2 LSB	8.1 LSB	

M5i.3360-x16/M5i.3367-x16/DNx.336-xx - 12 Bit 10 GS/s (channel 0)													
Input Range	±1 V						±2.5 V						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	51.3 dB	51.4 dB	51.3 dB	51.0 dB	51.3 dB	50.9 dB	51.3 dB	51.4 dB	51.3 dB	51.0 dB	51.3 dB	50.9 dB	
THD (typ)	-70.0 dB	-67.3 dB	-68.9 dB	-61.1 dB	-58.3 dB	-57.4 dB	-70.0 dB	-67.3 dB	-68.9 dB	-61.1 dB	-58.3 dB	-57.4 dB	
SFDR incl. harm. (typ)	59.4 dB	60.4 dB	58.9 dB	58.9 dB	59.1 dB	57.9 dB	59.4 dB	60.4 dB	58.9 dB	58.9 dB	59.1 dB	57.9 dB	
SFDR excl. harm. (typ)	59.4 dB	60.4 dB	58.9 dB	58.9 dB	62.3 dB	61.4 dB	59.4 dB	60.4 dB	58.9 dB	58.9 dB	62.3 dB	61.4 dB	
SINAD/THD+N (typ)	51.3 dB	51.3 dB	51.1 dB	50.6 dB	50.6 dB	50.1 dB	51.3 dB	51.3 dB	51.1 dB	50.6 dB	50.6 dB	50.1 dB	
ENOB/SINAD (typ)	8.2 LSB	8.2 LSB	8.2 LSB	8.1 LSB	8.1 LSB	8.0 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.1 LSB	8.1 LSB	8.0 LSB	
ENOB/SNR (typ)	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.2 LSB	

Dynamic Parameters 10.0 GS/s 3.0 GHz models

M5i.3350-x16/M5i.3357-x16/DNx.335-xx - 12 Bit 10 GS/s (channel 0)													
Input Range	±200 mV						±500 mV						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	51.5 dB	52.0 dB	51.3 dB	51.0 dB	50.9 dB	50.8 dB	52.0 dB	52.0 dB	51.2 dB	52.3 dB	51.5 dB	51.3 dB	
THD (typ)	-66.8 dB	-65.3 dB	-65.2 dB	-65.4 dB	-55.7 dB	-54.8 dB	-65.5 dB	-63.1 dB	-65.9 dB	-65.2 dB	-58.6 dB	-58.8 dB	
SFDR incl. harm. (typ)	56.0 dB	55.7 dB	54.6 dB	54.8 dB	55.6 dB	55.0 dB	55.7 dB	64.7 dB	54.3 dB	58.9 dB	59.6 dB	52.5 dB	
SFDR excl. harm. (typ)	56.0 dB	55.7 dB	54.6 dB	54.8 dB	55.6 dB	55.6 dB	55.7 dB	67.0 dB	54.3 dB	58.9 dB	59.6 dB	52.5 dB	
SINAD/THD+N (typ)	51.3 dB	51.8 dB	51.2 dB	50.9 dB	49.6 dB	49.4 dB	51.8 dB	51.9 dB	51.1 dB	52.2 dB	50.7 dB	49.2 dB	
ENOB/SINAD (typ)	8.2 LSB	8.3 LSB	8.2 LSB	8.2 LSB	8.0 LSB	7.9 LSB	8.3 LSB	8.3 LSB	8.2 LSB	8.4 LSB	8.1 LSB	7.9 LSB	
ENOB/SNR (typ)	8.3 LSB	8.3 LSB	8.2 LSB	8.2 LSB	8.2 LSB	8.0 LSB	8.3 LSB	8.3 LSB	8.2 LSB	8.4 LSB	8.2 LSB	8.2 LSB	

M5i.3350-x16/M5i.3357-x16/DNx.335-xx - 12 Bit 10 GS/s (channel 0)													
Input Range	±1 V						±2.5 V						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	51.7 dB	52.0 dB	51.7 dB	51.6 dB	51.2 dB	51.2 dB	52.0 dB	52.0 dB	51.2 dB	52.3 dB	51.5 dB	51.0 dB	
THD (typ)	-66.4 dB	-66.5 dB	-66.5 dB	-64.7 dB	-58.5 dB	-60.5 dB	-65.5 dB	-63.1 dB	-65.9 dB	-65.2 dB	-58.6 dB	-64.4 dB	
SFDR incl. harm. (typ)	55.8 dB	63.6 dB	55.9 dB	54.9 dB	59.5 dB	57.7 dB	55.7 dB	64.7 dB	54.3 dB	58.9 dB	59.6 dB	60.4 dB	
SFDR excl. harm. (typ)	55.8 dB	63.7 dB	55.9 dB	54.9 dB	60.0 dB	57.7 dB	55.7 dB	67.0 dB	54.3 dB	58.9 dB	59.6 dB	60.4 dB	
SINAD/THD+N (typ)	51.6 dB	51.9 dB	51.7 dB	51.5 dB	50.5 dB	51.2 dB	51.8 dB	51.9 dB	51.1 dB	52.2 dB	50.7 dB	50.9 dB	
ENOB/SINAD (typ)	8.3 LSB	8.3 LSB	8.3 LSB	8.3 LSB	8.1 LSB	8.2 LSB	8.3 LSB	8.3 LSB	8.2 LSB	8.4 LSB	8.1 LSB	8.1 LSB	
ENOB/SNR (typ)	8.3 LSB	8.3 LSB	8.3 LSB	8.3 LSB	8.2 LSB	8.2 LSB	8.3 LSB	8.3 LSB	8.2 LSB	8.4 LSB	8.2 LSB	8.2 LSB	

Dynamic Parameters 6.4 GS/s models

M5i.3330-x16/M5i.3337-x16/DNx.333-xx - 12 Bit 6.4 GS/s (channel 0)													
Input Range	±200 mV						±500 mV						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	53.1 dB	53.1 dB	53.0 dB	52.6 dB	51.9 dB	50.1 dB	53.8 dB	53.2 dB	53.4 dB	53.0 dB	52.4 dB	50.3 dB	
THD (typ)	-63.8 dB	-63.8 dB	-62.0 dB	-62.3 dB	-56.9 dB	-56.7 dB	-61.6 dB	-62.1 dB	-61.6 dB	-61.6 dB	-59.8 dB	-59.8 dB	
SFDR incl. harm. (typ)	62.0 dB	61.6 dB	62.4 dB	62.5 dB	59.7 dB	57.2 dB	62.5 dB	64.2 dB	60.7 dB	62.2 dB	58.1 dB	60.0 dB	
SFDR excl. harm. (typ)	62.0 dB	61.6 dB	62.6 dB	62.6 dB	64.5 dB	58.7 dB	65.0 dB	66.3 dB	60.6 dB	65.1 dB	58.1 dB	60.1 dB	
SINAD/THD+N (typ)	52.8 dB	52.6 dB	52.3 dB	52.5 dB	51.6 dB	49.6 dB	53.4 dB	53.6 dB	52.8 dB	53.0 dB	51.9 dB	50.0 dB	
ENOB/SINAD (typ)	8.5 LSB	8.5 LSB	8.4 LSB	8.4 LSB	8.3 LSB	8.0 LSB	8.6 LSB	8.6 LSB	8.5 LSB	8.6 LSB	8.3 LSB	8.0 LSB	
ENOB/SNR (typ)	8.5 LSB	8.6 LSB	8.6 LSB	8.5 LSB	8.3 LSB	8.0 LSB	8.7 LSB	8.6 LSB	8.6 LSB	8.6 LSB	8.5 LSB	8.0 LSB	

M5i.3330-x16/M5i.3337-x16/DNx.333-xx - 12 Bit 6.4 GS/s (channel 0)													
Input Range	±1 V						±2.5 V						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	53.4 dB	53.6 dB	53.3 dB	53.4 dB	52.5 dB	50.3 dB	53.5 dB	52.9 dB	53.5 dB	53.4 dB	51.9 dB	52.3 dB	
THD (typ)	-63.8 dB	-63.5 dB	-63.5 dB	-62.6 dB	-59.9 dB	-59.7 dB	-64.0 dB	-61.0 dB	-61.2 dB	-60.9 dB	-58.9 dB	-59.5 dB	
SFDR incl. harm. (typ)	62.0 dB	63.3 dB	65.1 dB	58.1 dB	60.4 dB	53.0 dB	62.2 dB	60.9 dB	63.6 dB	62.2 dB	58.7 dB	58.8 dB	
SFDR excl. harm. (typ)	62.0 dB	63.4 dB	66.3 dB	58.1 dB	60.8 dB	53.0 dB	62.2 dB	53.9 dB	63.5 dB	63.0 dB	59.4 dB	58.9 dB	
SINAD/THD+N (typ)	53.0 dB	53.2 dB	53.1 dB	52.6 dB	51.8 dB	49.6 dB	53.1 dB	52.9 dB	53.1 dB	52.9 dB	51.6 dB	51.5 dB	
ENOB/SINAD (typ)	8.5 LSB	8.5 LSB	8.6 LSB	8.4 LSB	8.3 LSB	8.0 LSB	8.5 LSB	8.5 LSB	8.6 LSB	8.5 LSB	8.3 LSB	8.3 LSB	
ENOB/SNR (typ)	8.6 LSB	8.6 LSB	8.6 LSB	8.6 LSB	8.5 LSB	8.1 LSB	8.6 LSB	8.6 LSB	8.6 LSB	8.6 LSB	8.3 LSB	8.4 LSB	

Dynamic Parameters 3.2 GS/s models

M5i.3321-x16/DNx.332-xx - 12 Bit 3.2 GS/s											
Input Range	±200 mV						±500 mV				
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz		10 MHz	40 MHz	70 MHz	240 MHz	600 MHz
SNR (typ)	54.1 dB	54.4 dB	54.7 dB	54.5 dB	54.5 dB		54.8 dB	55.0 dB	54.8 dB	54.6 dB	54.9 dB
THD (typ)	-64.3 dB	-63.4 dB	-62.3 dB	-61.1 dB	-59.5 dB		-61.5 dB	-62.0 dB	-66.5 dB	-61.7 dB	-57.5 dB
SFDR incl. harm. (typ)	64.7 dB	65.4 dB	63.5 dB	61.9 dB	61.8 dB		72.9 dB	64.9 dB	65.6 dB	62.1 dB	60.3 dB
SFDR excl. harm. (typ)	65.1 dB	73.8 dB	71.6 dB	72.5 dB	69.7 dB		65.6 dB	72.8 dB	65.8 dB	69.1 dB	67.7 dB
SINAD/THD+N (typ)	53.7 dB	53.9 dB	54.0 dB	53.6 dB	53.3 dB		54.0 dB	54.2 dB	54.6 dB	53.9 dB	52.9 dB
ENOB/SINAD (typ)	8.6 LSB	8.7 LSB	8.7 LSB	8.5 LSB	8.6 LSB		8.7 LSB	8.7 LSB	8.8 LSB	8.7 LSB	8.5 LSB
ENOB/SNR (typ)	8.7 LSB	8.7 LSB	8.8 LSB	8.8 LSB	8.8 LSB		8.8 LSB	8.8 LSB	8.8 LSB	8.8 LSB	8.8 LSB

M5i.3321-x16/DNx.332-xx - 12 Bit 3.2 GS/s											
Input Range	±1 V						±2.5 V				
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz		10 MHz	40 MHz	70 MHz	240 MHz	600 MHz
SNR (typ)	55.3 dB	55.3 dB	54.8 dB	54.8 dB	54.9 dB		54.8 dB	55.3 dB	54.8 dB	54.8 dB	54.9 dB
THD (typ)	-63.8 dB	-63.8 dB	-59.5 dB	-62.5 dB	-57.8 dB		-63.4 dB	-63.8 dB	-59.5 dB	-62.5 dB	-57.8 dB
SFDR incl. harm. (typ)	64.5 dB	66.3 dB	60.7 dB	63.5 dB	60.4 dB		62.5 dB	66.3 dB	60.7 dB	63.5 dB	60.4 dB
SFDR excl. harm. (typ)	65.3 dB	73.2 dB	67.4 dB	71.0 dB	68.9 dB		62.7 dB	73.2 dB	67.4 dB	71.0 dB	68.9 dB
SINAD/THD+N (typ)	54.2 dB	54.8 dB	53.6 dB	54.1 dB	53.1 dB		54.2 dB	54.8 dB	53.6 dB	54.1 dB	53.1 dB
ENOB/SINAD (typ)	8.7 LSB	8.8 LSB	8.6 LSB	8.7 LSB	8.5 LSB		8.7 LSB	8.8 LSB	8.6 LSB	8.7 LSB	8.5 LSB
ENOB/SNR (typ)	8.9 LSB	8.9 LSB	8.8 LSB	8.8 LSB	8.8 LSB		8.8 LSB	8.9 LSB	8.8 LSB	8.8 LSB	8.8 LSB

Dynamic Parameters 10.0 GS/s 4.7 GHz models (8-bit Mode)

The below dynamic parameters are measured using the 8-bit mode which reduces the resolution in hardware from 12 bit to 8 bit to save memory and data transfer bandwidth. Due to the hardware resolution being below the ENOB of all models, the dynamic parameters are similar for all models when switched to the 8-bit mode.

	M5i.3360-x16/M5i.3367-x16/DNx.336-xx - 8 Bit 10 GS/s (channel 0)											
Input Range	±200 mV						±500 mV					
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz
SNR (typ)	46.8 dB	46.7 dB	46.6 dB	46.5 dB	46.5 dB	46.3 dB	46.8 dB	47.0 dB	46.8 dB	46.8 dB	46.9 dB	46.7 dB
THD (typ)	-65.2 dB	-66.1 dB	-67.0 dB	-60.6 dB	-54.3 dB	-54.0 dB	-65.4 dB	-66.2 dB	-65.3 dB	-60.6 dB	-58.9 dB	-56.7 dB
SFDR incl. harm. (typ)	55.3 dB	54.0 dB	55.2 dB	56.8 dB	55.6 dB	55.0 dB	56.1 dB	57.0 dB	53.5 dB	54.3 dB	56.2 dB	56.7 dB
SFDR excl. harm. (typ)	55.3 dB	54.0 dB	55.2 dB	56.8 dB	55.6 dB	56.4 dB	56.1 dB	57.0 dB	53.5 dB	55.3 dB	56.2 dB	56.7 dB
SINAD/THD+N (typ)	46.8 dB	46.7 dB	46.6 dB	46.3 dB	46.0 dB	45.7 dB	46.9 dB	47.0 dB	46.7 dB	46.7 dB	46.7 dB	46.5 dB
ENOB/SINAD (typ)	7.5 LSB	7.5 LSB	7.5 LSB	7.4 LSB	7.4 LSB	7.3 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.4 LSB
ENOB/SNR (typ)	7.5 LSB	7.5 LSB	7.5 LSB	7.4 LSB	7.4 LSB	7.4 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB

	M5i.3360-x16/M5i.3367-x16/DNx.336-xx - 8 Bit 10 GS/s (channel 0)												
Input Range	±1 V						±2.5 V						
Test signal frequency	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	10 MHz	40 MHz	70 MHz	240 MHz	600 MHz	1.2 GHz	
SNR (typ)	47.0 dB	46.9 dB	46.9 dB	46.8 dB	46.9 dB	46.7 dB	46.8 dB	47.0 dB	46.8 dB	46.8 dB	46.9 dB	46.7 dB	
THD (typ)	-65.6 dB	-65.8 dB	-66.5 dB	-61.9 dB	-58.9 dB	-57.9 dB	-65.4 dB	-66.2 dB	-65.3 dB	-60.6 dB	-58.9 dB	-56.7 dB	
SFDR incl. harm. (typ)	56.1 dB	55.2 dB	55.2 dB	55.9 dB	54.7 dB	56.2 dB	56.1 dB	57.0 dB	53.5 dB	54.3 dB	56.2 dB	56.7 dB	
SFDR excl. harm. (typ)	56.1 dB	55.2 dB	55.2 dB	55.9 dB	54.7 dB	56.2 dB	56.1 dB	57.0 dB	53.5 dB	55.3 dB	56.2 dB	56.7 dB	
SINAD/THD+N (typ)	47.0 dB	46.9 dB	46.9 dB	46.7 dB	46.7 dB	46.5 dB	46.9 dB	47.0 dB	46.7 dB	46.7 dB	46.7 dB	46.5 dB	
ENOB/SINAD (typ)	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.4 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.4 LSB	
ENOB/SNR (typ)	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	7.5 LSB	

Dynamic parameters are measured at ±1 V input range (if no other range is stated) and 50 Ω termination with the samplerate specified in the table. Measured parameters are averaged 20 times to get typical values. Test signal is a pure sine wave generated by a signal generator and a matching bandpass filter. Amplitude is >99% of FSR. SNR and RMS noise parameters may differ depending on the quality of the used PC. SNR = Signal to Noise Ratio, THD = Total Harmonic Distortion, SFDR = Spurious Free Dynamic Range, SINAD = Signal Noise and Distortion, ENOB = Effective Number of Bits.

RMS Noise Level (Zero Noise)

		DC, fixed 50 Ω, typical						
Input Range	±200 mV		±500 mV		±1 V		±2.5 V	
Voltage resolution (1 LSB)	97 µV		244 µV		488 µV		1.22 mV	
One channel operation*								
M5i.336x @ 10 GS/s (typ)	3.9 LSB	381 µV	3.8 LSB	928 µV	4.3 LSB	2.1 mV	4.3 LSB	5.3 mV
M5i.335x @ 10 GS/s (typ)	3.9 LSB	381 µV	3.8 LSB	928 µV	4.3 LSB	2.1 mV	4.3 LSB	5.3 mV
M5i.333x @ 6.4 GS/s (typ)	3.7 LSB	361 µV	3.0 LSB	732 µV	3.8 LSB	1.9 mV	3.5 LSB	4.3 mV
Two channel operation								
M5i.336x @ 5 GS/s (typ)	4.1 LSB	398 µV	3.4 LSB	830 µV	3.6 LSB	1.8 mV	3.4 LSB	4.1 mV
M5i.335x @ 5 GS/s (typ)	4.0 LSB	391 µV	3.3 LSB	806 µV	3.6 LSB	1.8 mV	2.9 LSB	3.5 mV
M5i.333x @ 3.2 GS/s (typ)	3.0 LSB	293 µV	2.8 LSB	684 µV	3.0 LSB	1.5 mV	2.7 LSB	3.3 mV
M5i.332x @ 3.2 GS/s (typ)	2.8 LSB	273 µV	2.3 LSB	562 µV	2.3 LSB	1.1 mV	2.9 LSB	3.5 mV
8-bit sample reduction mode*								
M5i.336x @ 10 GS/s (typ)	0.5 LSB	780 µV	0.5 LSB	1.95 mV	0.5 LSB	3.9 mV	0.5 LSB	9.8 mV

* in one channel or 8-bit operation mode, channel 0 is used, because the channel 0 of the DAC is optimized for running at full speed.

DN6 specific Technical Data

Environmental and Physical Details DN6.xxx

Dimension of Chassis without connectors or bumpers	L x W x H	464 mm x 431 mm x 131 mm
Dimension of Chassis with 19" rack mount option	L x W x H	464 mm x TBD mm x 131 mm (3U height)
Weight (2 internal acquisition/generation modules)		12.5 kg, with rack mount kit: 13.1 kg
Weight (3 internal acquisition/generation modules)		13.3 kg, with rack mount kit: 13.9 kg
Weight (4 internal acquisition/generation modules)		14.1 kg, with rack mount kit: 14.7 kg
Weight (5 internal acquisition/generation modules)		14.9 kg, with rack mount kit: 15.6 kg
Weight (6 internal acquisition/generation modules)		15.7 kg, with rack mount kit: 16.3 kg
Warm up time		10 minutes
Operating temperature		0°C to 40°C
Storage temperature		-10°C to 70°C
Humidity		10% to 90%
Dimension of packing (single DN6)	L x W x H	580 mm x 580 mm x 280 mm
Volume weight of Packing (single DN6)		19.0 kg


Power Consumption

	230 VAC	
4 channel versions (meas)	TBD	TBD
6 channel versions (meas)	TBD	TBD
8 channel versions (meas)	TBD	TBD
10 channel versions (meas)	TBD	TBD
12 channel versions (meas)	TBD	TBD

MTBF


MTBF (typ)	100000 hours
------------	--------------

Block diagram of digitizerNETBOX DN6

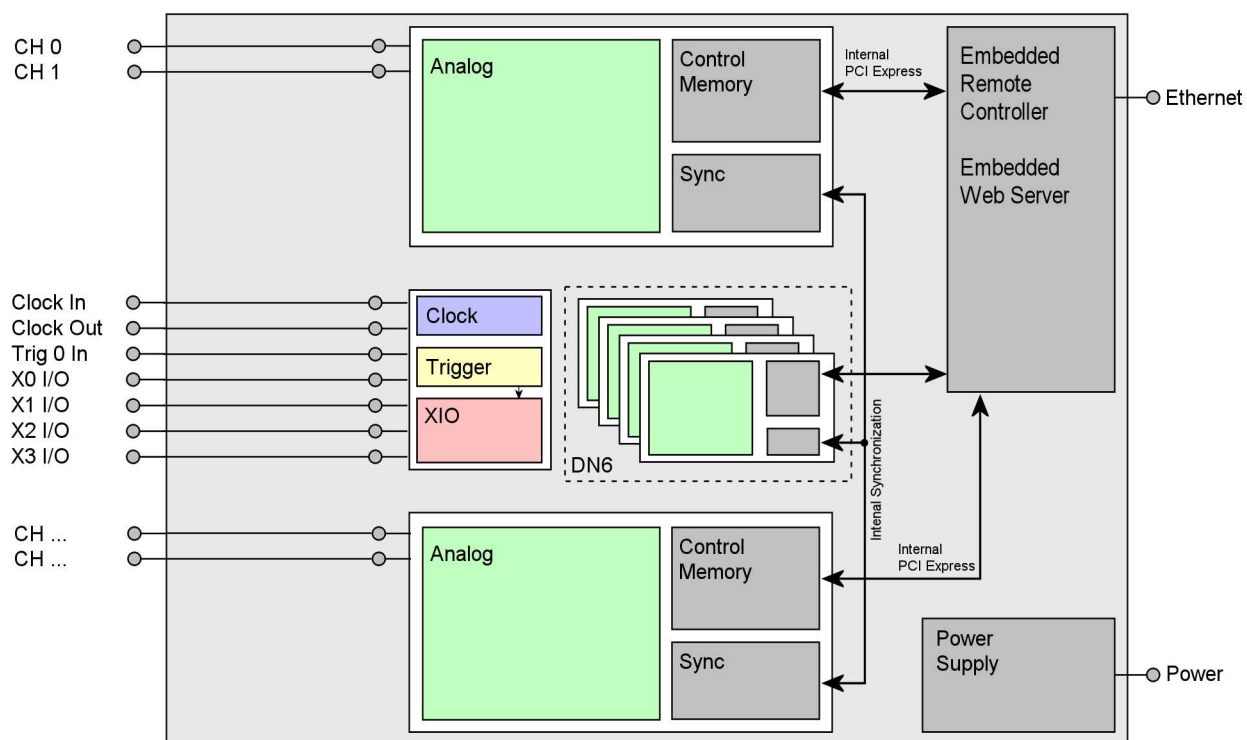

- The number of maximum channels and internal digitizer modules and existence of a synchronization Star-Hub is model dependent.

Block diagram of digitzerNETBOX module DN6.33x

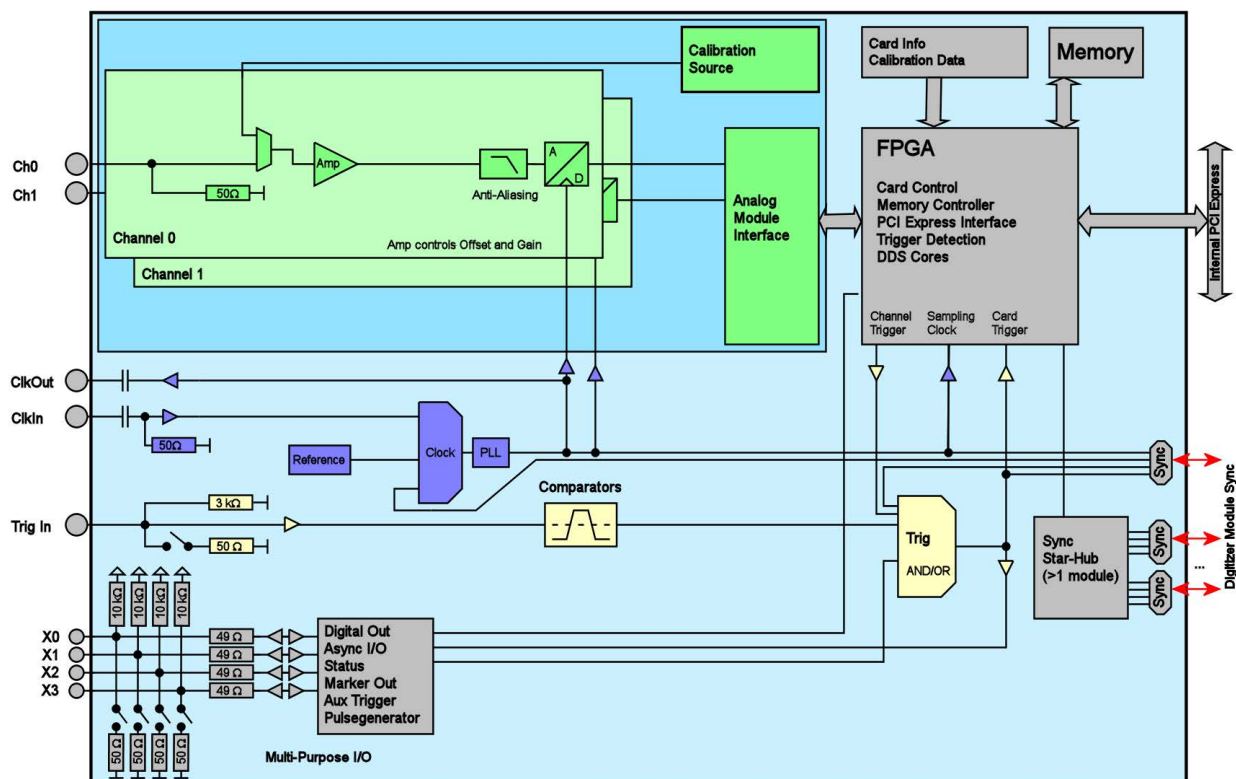

Order Information

The digitizerNETBOX is equipped with a large internal memory for data storage and supports standard acquisition (Scope), FIFO acquisition (streaming), Multiple Recording, Gated Sampling, ABA mode and Timestamps. Operating system drivers for Windows/Linux 32 bit and 64 bit, drivers and examples for C/C++, IVI (Scope and Digitizer class), LabVIEW (Windows), MATLAB (Windows and Linux), .NET, Delphi, Java, Python, Julia and a Professional license of the oscilloscope software SBench 6 are included.

The system is delivered with a connection cable meeting your countries power connection. Additional power connections with other standards are available as option.

digitizerNETBOX DN6 - Ethernet/LXI Interface

Order no.	A/D Resolution	Maximum Speed		Maximum Channels		Installed Memory	Available Memory Option
DN6.335-04	12 Bit	2 channels	10.0 GS/s	4 channels	5.0 GS/s	1 GiS/channel	4 GiS/channel
DN6.335-06	12 Bit	3 channels	10.0 GS/s	6 channels	5.0 GS/s	1 GiS/channel	4 GiS/channel
DN6.335-08	12 Bit	4 channels	10.0 GS/s	8 channels	5.0 GS/s	1 GiS/channel	4 GiS/channel
DN6.335-10	12 Bit	5 channels	10.0 GS/s	10 channels	5.0 GS/s	1 GiS/channel	4 GiS/channel
DN6.335-12	12 Bit	6 channels	10.0 GS/s	12 channels	5.0 GS/s	1 GiS/channel	4 GiS/channel
DN6.333-04	12 Bit	2 channels	6.4 GS/s	4 channels	3.2 GS/s	1 GiS/channel	4 GiS/channel
DN6.333-06	12 Bit	3 channels	6.4 GS/s	6 channels	3.2 GS/s	1 GiS/channel	4 GiS/channel
DN6.333-08	12 Bit	4 channels	6.4 GS/s	8 channels	3.2 GS/s	1 GiS/channel	4 GiS/channel
DN6.333-10	12 Bit	5 channels	6.4 GS/s	10 channels	3.2 GS/s	1 GiS/channel	4 GiS/channel
DN6.333-12	12 Bit	6 channels	6.4 GS/s	12 channels	3.2 GS/s	1 GiS/channel	4 GiS/channel
DN6.332-04	12 Bit	4 channels	3.2 GS/s			1 GiS/channel	4 GiS/channel
DN6.332-06	12 Bit	6 channels	3.2 GS/s			1 GiS/channel	4 GiS/channel
DN6.332-08	12 Bit	8 channels	3.2 GS/s			1 GiS/channel	4 GiS/channel
DN6.332-10	12 Bit	10 channels	3.2 GS/s			1 GiS/channel	4 GiS/channel
DN6.332-12	12 Bit	12 channels	3.2 GS/s			1 GiS/channel	4 GiS/channel

Options

Order no.	Option
M5i.xxxx-MEM8GS	Optional memory extension to 8 GiSamples (16 GiBytes)
M5i.3321-inptd	M5i.3321-x16/DNx.332-xx input stage optimized for time domain measurements with smooth step response. Option for a single digitizer
DN2.xxx-Rack	19" rack mounting set for self mounting
DN2.xxx-Emb	Extension to Embedded Server: CPU, more memory, SSD. Access via remote Linux secure shell (ssh)
DN2.xxx-DC24	24 VDC internal power supply. Replaces AC power supply. Accepts 18 V to 36 V DC input. Screw terminals

Order no.	Option
DN6.xxx-Rack	19" rack mounting set for self mounting
DN6.xxx-Emb	Extension to Embedded Server: CPU, more memory, SSD. Access via remote Linux secure shell (ssh)
DN6.xxx-BTPWR	Boot on Power On: the digitizerNETBOX/generatorNETBOX/hybridNETBOX automatically boots if power is switched on.

Firmware Options

Order no.	Option
M5i.xxxx-spavg	Signal Processing Firmware Option: Block Average with TDA (later firmware-upgrade available). License for a single digitizer
M5i.xxxx-PulseGen	Firmware Option: adds 4 freely programmable digital pulse generators that use the XIO lines for output (later installation by firmware-upgrade available)

Calibration

Order no.	Option
DN6.xxx-Recal	Recalibration of complete digitizerNETBOX/generatorNETBOX DN6 including calibration protocol
DN6.ProtN-17025	ISO 17025 Calibration Certificate for one DN6; add-on for new cards or for recalibration. N = number of internal cards: Prot2, Prot3, Prot4, Prot5, Prot6

Standard SMA Cables

The standard adapter cables are based on RG174 cables and have a nominal attenuation of 0.3 dB/m at 100 MHz and 0.5 dB/m at 250 MHz. For high speed signals we recommend the low loss cables series CHF.

for Connections	Connection	Length	to BNC male	to BNC female	to SMB female	to MMCX male	to SMA male
All	SMA male	80 cm	Cab-3mA-9m-80	Cab-3mA-9f-80	Cab-3f-3mA-80	Cab-1m-3mA-80	Cab-3mA-3mA-80
All	SMA male	200 cm	Cab-3mA-9m-200	Cab-3mA-9f-200	Cab-3f-3mA-200	Cab-1m-3mA-200	Cab-3mA-3mA-200
Probes (short)	SMA male	5 cm		Cab-3mA-9f-5			

Low Loss SMA Cables

The low loss adapter cables are based on MF141 cables and have an attenuation of 0.3 dB/m at 500 MHz and 0.5 dB/m at 1.5 GHz. They are recommended for signal frequencies of 200 MHz and above.

Order no.	Option
CHF-3mA-3mA-200	Low loss cables SMA male to SMA male 200 cm
CHF-3mA-9m-200	Low loss cables SMA male to BNC male 200 cm

Technical changes and printing errors possible

SBench, digitizerNETBOX, generatorNETBOX and hybridNETBOX are registered trademarks of Spectrum Instrumentation GmbH. Microsoft, Visual C++, Windows, Windows 98, Windows NT, Window 2000, Windows XP, Windows Vista, Windows 7, Windows 8, Windows 10 and Windows 11 are trademarks/registered trademarks of Microsoft Corporation. LabVIEW, DASYLab, Diadem and LabWindows/CVI are trademarks/registered trademarks of National Instruments Corporation. MATLAB is a trademark/registered trademark of The Mathworks, Inc. Delphi and C++ Builder are trademarks/registered trademarks of Embarcadero Technologies, Inc. IVI is a registered trademark of the IVI Foundation. Oracle and Java are registered trademarks of Oracle and/or its affiliates. Python is a trademark/registered trademark of Python Software Foundation. Julia is a trademark/registered trademark of Julia Computing, Inc. PCIe, PCI Express and PCI-X and PCI-SIG are trademarks of PCI-SIG. LXI is a registered trademark of the LXI Consortium. PICMG and CompactPCI are trademarks of the PCI Industrial Computation Manufacturers Group. Intel and Intel Core i3, Core i5, Core i7, Core i9 and Xeon are trademarks and/or registered trademarks of Intel Corporation. AMD, Opteron, Sempron, Phenom, FX, Ryzen and EPYC are

trademarks and/or registered trademarks of Advanced Micro Devices. Arm is a trademark or registered trademark of Arm Limited (or its subsidiaries). NVIDIA, CUDA, GeForce, Quadro, Tesla and Jetson are trademarks/registered trademarks of NVIDIA Corporation.